

FUHR Fluchttürverschlüsse gemäß EN 179 Emergency exit devices according to EN 179

Bestimmung der Türrichtung

Bei Mehrfachverriegelungen mit geteilter Nuss bitte unbedingt neben der Türrichtung auch die Schlagrichtung (einwärts/auswärts öffnend) angeben.

Fluchttüren sind in der Regel auswärts öffnend. In Ausnahmefällen können Notausgangstüren entsprechend der EN 179 auch einwärts öffnend zugelassen werden. Bei Paniktüren nach EN 1125 ist dies nicht zulässig.

Bei FUHR Mehrfachverriegelungen kann durch Drehen der Falle und, je nach Ausführung, auch der Fallenriegel die Öffnungsrichtung geändert werden.

So wird bspw. aus **DIN links auswärts** öffnend die Türrichtung **DIN rechts einwärts** öffnend und umgekehrt.

Determining the door opening direction

When ordering multipoint locking systems with split spindle, please always specify not just the side on which the door is hinged (LH/RH), but also the opening direction (inward opening/outward opening).

Emergency exit doors generally open outwards. Under exceptional circumstances, emergency exit doors can also be permitted to open inwards in accordance with EN 179. This is not permitted for panic doors in accordance with EN 1125.

With FUHR multi-point locking systems, the opening direction can be changed by turning the latch and, depending on the version, also the deadlocking latches.


For example, **DIN left outward** opening becomes **DIN right inward** opening and vice versa.




DIN links auswärts öffnend
DIN left outward opening



DIN rechts auswärts öffnend
DIN right outward opening

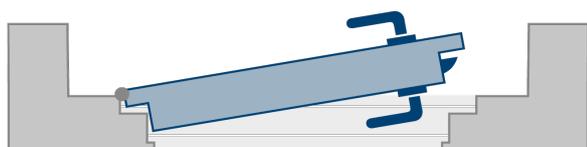

DIN rechts einwärts öffnend
DIN right inward opening

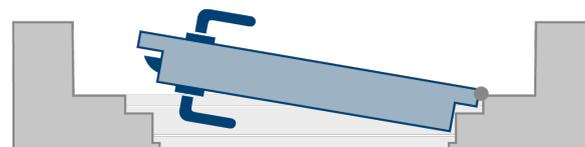

DIN links einwärts öffnend
DIN left inward opening